

K-LITE

Underwater Luminaires

High efficiency LED underwater luminaire for illumination of medium and large swimming pools, water features and fountains, revealing underwater architecture.

Product Description

- Luminaire housing made of marine grade stainless steel #316.
- Silicone gasket. Stainless steel screws.
- Step tempered glass diffuser.
- Optical lens, efficiency $\geq 85\%$.
- Luminaire hard wired for single colour 2 x 1.0sqmm 3 metres water resistant cable.
- Recommended installation depth upto 1 metre below the water surface
- Supplied with mounting sleeve for preparing recessed opening in ground.
- Temperature of water between $-20^{\circ}\text{C} \sim +40^{\circ}\text{C}$.



Area of Application

Fountains, Swimming pools, Water features and other similar applications.

Water Arrestor

Additional Feature

A water arrester in luminaires serves to prevent water intrusion into the fixture, which is especially important given the exposure to outdoor conditions and possible water pooling around the fixture.


Its main functions are:

Pressure Regulation: The water arrester helps regulate internal pressure changes that can occur due to temperature fluctuations. This reduces the risk of water being drawn into the fixture when it cools and contracts & Supports pressure equalization to avoid condensation buildup inside the housing.

Seal Protection: By acting as a barrier to water vapor or moisture, the arrester helps maintain the integrity of seals and gaskets over time, reducing the risk of water ingress and extending the life of the fixture.

Enhanced Durability: Preventing moisture inside the fixture avoids corrosion, electrical shorts, and fogging of the lens, ensuring optimal lighting performance and reducing maintenance needs. Protects internal electrical components from moisture damage.

In short, a water arrester enhances the longevity and performance of lighting products by keeping internal components dry.

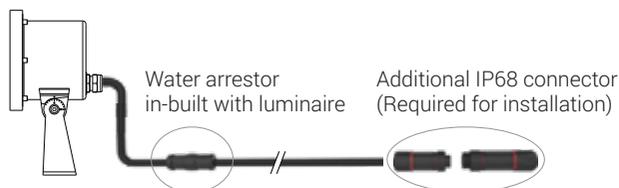

Warranty void if this is cut.





COURTYARD BY MARRIOTT, TIRUCHIRAPPALLI

Product Description

- Complete housing made of marine grade stainless steel #316
- PCB made of excellent heat conductivity aluminium, coefficient of heat conductivity $\geq 2.0w/mk$
- Luminaire hard wired for single colour 2 x 1.0mm² 3 metres water resistant cable.
- Recommended installation depth upto 1 metre below the water surface.



Technical Specifications

General

ID : 22812
 System Wattage : 12W LED
 Driver Mounting : Non Integral
 Operating Current : 510mA
 Operating Temperature : -20°C ~ +40°C

Light Source

Light source : OSRAM
 CRI (Ra) : ≥ 80
 LED Colour Temperature : 3000K

Physical

Body : Marine grade SS 316
 Diffuser : Step Tempered Glass T=8mm
 Gasket : Silicone
 Mounting Sleeve : ABS

Driver Options

Remote Driver : 12Vdc
 Dimmable : Dali - On Request

Optical

Beam Angle : 20°
 Optical Lens Efficiency : >85%



Product Dimension

