

These energy efficient In-ground recessed luminaire's are designed to create luminous walkways or accentuate architecture elements in facades and landscapes providing distinctive lighting effects. Designed for high lumen efficiency at reduced wattage creating exceptional lighting effects.

Product Description

- Luminaire housing made up of pressure die-cast aluminium of high corrosion resistance and non corrosive stainless steel fasteners.
- Hard chromeplated stainless steel 316 grade front ring.
- Silicone seal gasket.
- Clear toughened glass.
- Luminaire hard wired with 3 x 0.5mm² cable of 0.5 metre length.
- Supplied with mounting sleeve for preparing recessed opening in ground or wall.
- Cable entries for through-wiring of mains supply cable.
- Integral constant current power supply
- CRI (Ra) : ≥80
- Prewired with LED driver and suitable for operating on 240V, 50Hz single phase ac supply.
- Ordering guide : KL-24092-CCT (Colour Temperature)
- Available CCT : 2700K, 3000K, 4000K, 5700K



Product Benefits

- High luminous efficiency at reduced wattage.
- A sleek and minimalist shape provides distinctive lighting effects for inground and wall architecture.
- Sustainable LED technology offers durability and optimal light output with low power consumption.

Area of Application

Walk ways, Facades, Landscapes, Architectural elements.

Accessory

- Additional IP68 rated connector needed for installation.
- Polypropylene mounting sleeve for easy installation.





JDA WONDERLAND PARK, JAIPUR

Technical Specifications

General

ID	: 24092 (Sym) / 24093 (Asy)
System Wattage	: 3W LED
Driver Integral	: Constant Current
Operating Voltage	: 150-270Vac
Operating Temperature	: -15°C~+50°C

Physical

Body	: Die-Cast Aluminium
Front Ring	: 316 Grade Stainless Steel
Diffuser	: Clear Toughened Glass
Mounting Sleeve	: Polypropylene Black
Mounting	: Recess

Light Source

Light Source	: NICHIA
CRI (Ra)	: ≥80
LED Colour Temperature	: 2700K / 3000K / 4000K / 5700K

Driver

Input Voltage	: 240Vac
Frequency	: 50-60 Hz

Optical Performance



Beam Angle (Sym)	: 12° / 24° / 40°
------------------	-------------------



Symmetrical



Asymmetrical

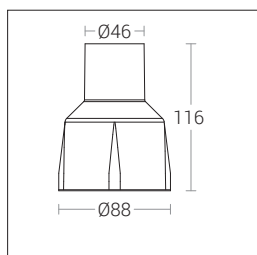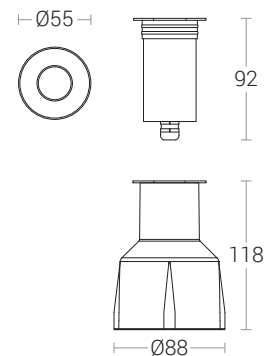

Note : It is our constant endeavor to upgrade the performance of our products. For the latest technical information, IES files and product updates please refer to the website at www.klite.in

Water Arrestor

Additional Feature

A water arrestor in lighting products serves to prevent water intrusion into the fixture, which is especially important given the exposure to outdoor conditions and possible water pooling around the fixture. Its main functions are :

Pressure Regulation :

The water arrestor helps regulate internal pressure changes that can occur due to temperature fluctuations. This reduces the risk of water being drawn into the fixture when it cools and contracts & Supports pressure equalization to avoid condensation buildup inside the housing.


Seal Protection :

By acting as a barrier to water vapor or moisture, the arrestor helps maintain the integrity of seals and gaskets over time, reducing the risk of water ingress and extending the life of the fixture.

Enhanced Durability :

Preventing moisture inside the fixture avoids corrosion, electrical shorts, and fogging of the lens, ensuring optimal lighting performance and reducing maintenance needs. Protects internal electrical components from moisture damage.

In short, a water arrestor enhances the longevity and performance of lighting products by keeping internal components dry.

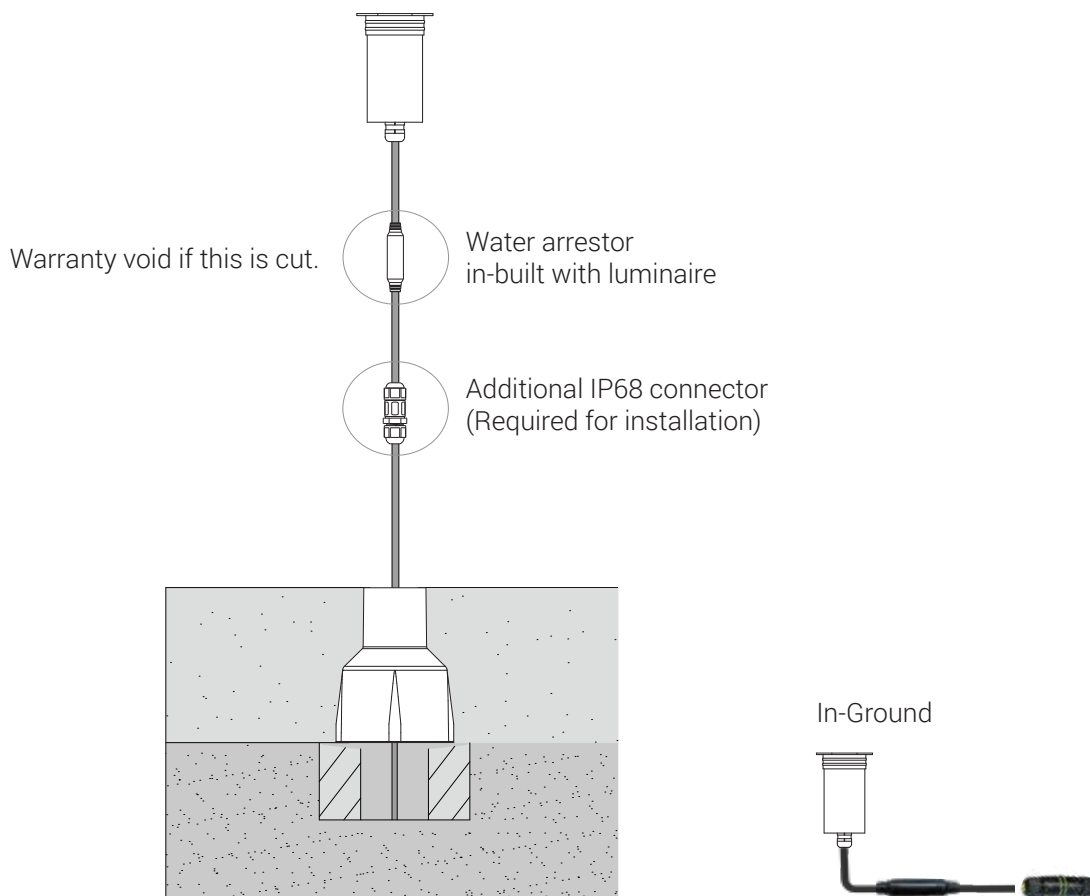

Additional IP68 connector (Required for installation)



Warranty void if this water arrestor is cut.