

K-LITE

Underwater Luminaires

High efficiency LED underwater luminaire for illumination of medium and large swimming pools, water features and fountains, revealing underwater architecture.

Product Description

- Luminaire housing made of marine grade stainless steel #316.
- Silicone gasket. Stainless steel screws.
- Step tempered glass diffuser.
- Optical lens, efficiency $\geq 85\%$.
- Luminaire hard wired for single colour 2 x 1.0sqmm 3 metres water resistant cable.
- Recommended installation depth upto 1 metre below the water surface
- Supplied with mounting sleeve for preparing recessed opening in ground.
- Temperature of water between $-20^{\circ}\text{C} \sim +40^{\circ}\text{C}$.



Area of Application

Fountains, Swimming pools, Water features and other similar applications.

Water Arrestor

Additional Feature

A water arrester in luminaires serves to prevent water intrusion into the fixture, which is especially important given the exposure to outdoor conditions and possible water pooling around the fixture.


Its main functions are:

Pressure Regulation: The water arrester helps regulate internal pressure changes that can occur due to temperature fluctuations. This reduces the risk of water being drawn into the fixture when it cools and contracts & Supports pressure equalization to avoid condensation buildup inside the housing.

Seal Protection: By acting as a barrier to water vapor or moisture, the arrester helps maintain the integrity of seals and gaskets over time, reducing the risk of water ingress and extending the life of the fixture.

Enhanced Durability: Preventing moisture inside the fixture avoids corrosion, electrical shorts, and fogging of the lens, ensuring optimal lighting performance and reducing maintenance needs. Protects internal electrical components from moisture damage.

In short, a water arrester enhances the longevity and performance of lighting products by keeping internal components dry.

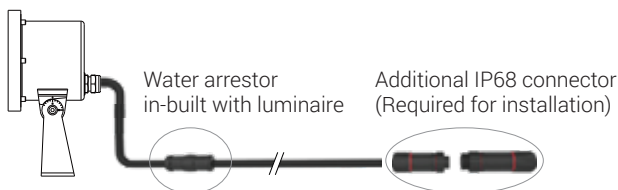



OPEN SOURCE

Product Description

- Complete housing made of marine grade stainless steel #316
- PCB made of excellent heat conductivity aluminium, coefficient of heat conductivity $\geq 2.0w/mk$
- Luminaire hard wired for single colour 2 x 1.0mm² 3 metres water resistant cable.
- Recommended installation depth upto 1 metre below the water surface.




Technical Specifications

General		Light Source	
ID	: 24132	Light source	: NICHIA
System Wattage	: 18W LED	CRI (Ra)	: ≥ 80
Driver Mounting	: Non Integral	LED Colour Temperature	: 3000K
Operating Current	: 1516mA	<hr/>	
Operating Temperature	: -20°C ~ +40°C	Driver Options	
<hr/>		Remote Driver	: 12Vdc
Physical		Dimmable	: Dali - On Request
Body	: Marine grade SS 316	<hr/>	
Diffuser	: Step tempered glass	Optical	
Gasket	: Silicone	Beam Angle	: 30°
<hr/>		Optical Lens Efficiency	: >85%



Light Distribution

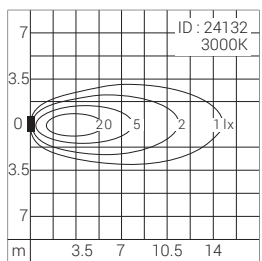

Applied Photometry : H=1m

Product Dimension

