

LED compact spot light luminaires designed to provide directional light. The luminaires comes with a connecting cable and bracket for permanent installation on a wall, under a ceiling or on a column.

Product Description

- Luminaire made of pressure die cast aluminium alloy of high corrosion resistance and non corrosive stainless steel fasteners.
- Clear toughened glass.
- Mounting die-cast aluminium bracket arrangement to facilitate easy installation at any desired location.
- Swivel range of 0°-90° & Rotational 360°.
- Luminaire supplied with 0.5 metre cable length.
- Silicone gasket.
- Prewired with GU10 holder and suitable for operation on 240V, 50Hz single phase ac supply.



Product Benefits

- Sturdy construction in order to maintain performance of the luminaire and to reduce maintenance costs.
- Quick & simple installation.
- Clear glass in the front with continuous rubber gasket to ensure adequate sealing against ingress of moisture, dust, insects etc.,

Areas of Application

Pathways, Parks, Sculptures, Gardens, Structures and Landscape lighting.

Available Finish

Pure polyester powder coated

RAL 9004 Black

RAL 9007 Grey aluminium

RAL 7016 Anthracite grey

Graphite grey




Accessory



Anti-Glare Visor

Spill Control Snoot

Honey Comb Louvre

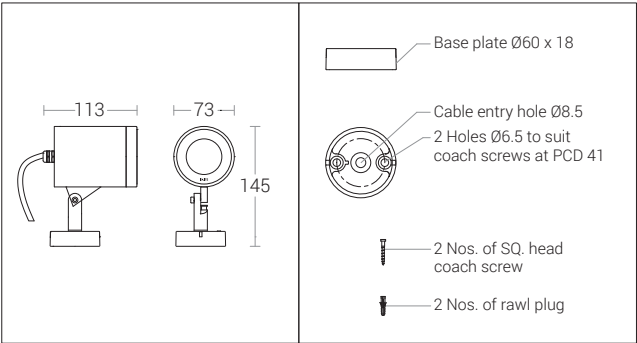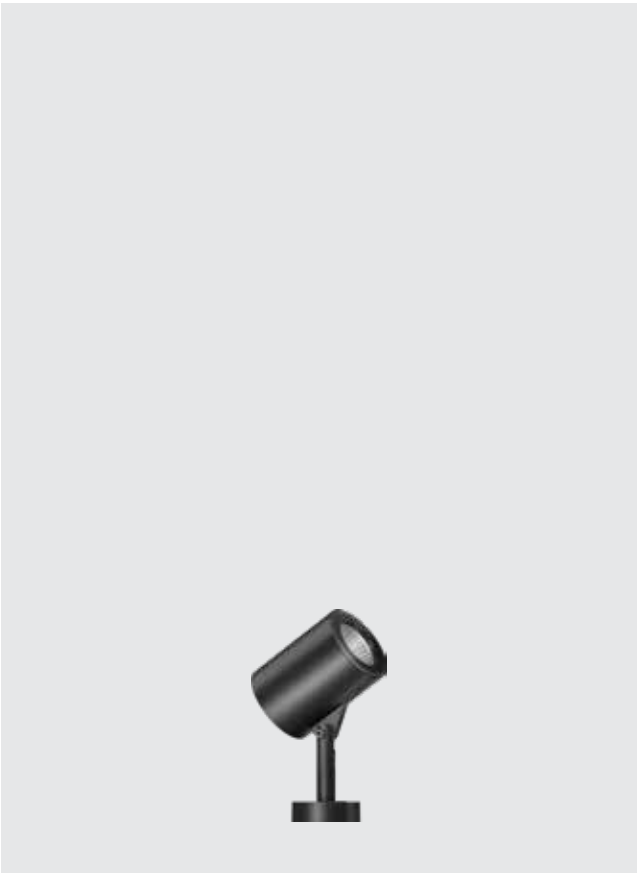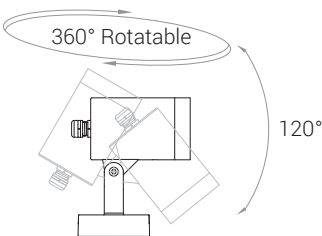

ID	Description	Wattage
24593	Bracket	GU10 Holder